


Touch Screen (If Equipped)

By touching the screen with your finger, you can control the audio system and air conditioning, adjust the screen display, etc. For details, refer to the "Owner's Manual".

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

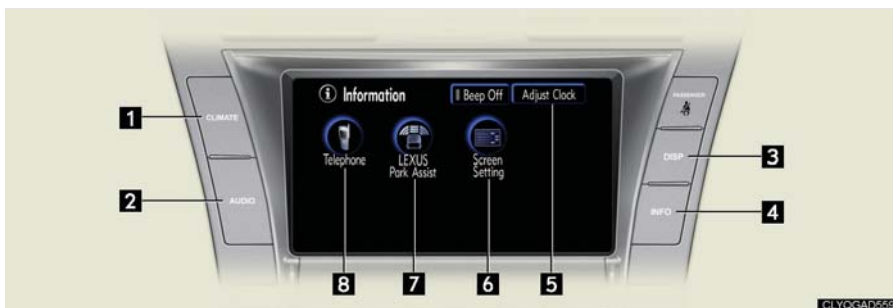

Press the button to display the screen. The "Information" screen shown in the above illustration is displayed when the "INFO" button is pressed.

- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "DISP": Display screen
- 4 "INFO": Information screen
- 5 "Adjust Clock": Adjust clock screen
- 6 "Screen Setting": Screen setting screen
- 7 "LEXUS Park Assist": Intuitive parking assist setting screen
- 8 "Telephone": Telephone screen

Audio System (without navigation system)

For detailed operation procedures and operation procedures for the DVD player (if equipped), refer to the "Owner's Manual". Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

n Basic operation

► Type A (without touch screen)



- 1 Power/Volume
- 2 Sound quality modes
- 3 Listening position
- 4 Automatic Sound Levelizer ("ASL")
- 5 Audio sources
 - "AM": AM radio
 - "FM": FM radio
 - "DISC·AUX": CD player/Auxiliary audio device


► Type B (with touch screen)



- 1 Displays the audio control screen
- 2 Automatic Sound Levelizer (ASL)
Listening position (if equipped)
- 3 Audio sources
 - "AM": AM radio
 - "FM": FM radio
 - "DISC·AUX": CD player/Auxiliary audio device
- 4 Power/Volume
- 5 Sound quality and balance modes

n Radio

► Type A (without touch screen)

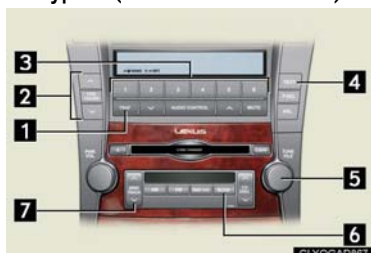

1 Traffic information

2 RDS genre select

3 Station presets

4 Text messages

5 Radio tuner

6 Scan

All radio stations: press

Preset radio stations: press and hold

7 Seek

n Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

► Type B (with touch screen)



1 Displays the audio control screen

2 Station presets

3 Scan

All radio stations: press

Preset radio stations: press and hold

4 Radio tuner

5 Station select

6 Seek

n Entering station presets

- 1 Select the desired station by using the tuner, or the seek or the scan functions.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

n CD player

n Playing an audio CD

► Type A (without touch screen)



- 1 Random playback
Current CD: press
All CDs: press and hold
- 2 Repeat
Current track: press
Current CD: press and hold
- 3 Rewind
- 4 Fast-forward
- 5 Text information
- 6 CD load
- 7 CD select
- 8 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 9 Track select
- 10 Eject

► Type B (with touch screen)



- 1 Displays the audio control screen
- 2 Display track list
- 3 CD select
- 4 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 5 Random playback
Current CD: press
All CDs: press and hold
- 6 CD load
- 7 Track select/rewind/fast-forward
- 8 Eject
- 9 Repeat
Current track: press
Current CD: press and hold

n Playing a CD with MP3/WMA files

► Type A (without touch screen)



- 1 Random playback
Current file: press
All files in current folder: press and hold
- 2 Repeat
Current file: press
All files in current folder: press and hold
- 3 Rewind
- 4 Fast-forward
- 5 Text information
- 6 CD load
- 7 File select
- 8 CD select
- 9 Scan
All files in current folder: press
First file of each folder: press and hold
- 10 Eject
- 11 Folder select

► Type B (with touch screen)



- 1 Displays the audio control screen
- 2 Display folder list
- 3 Folder select
- 4 Scan
All files in current folder: press
First file of each folder: press and hold
- 5 Random playback
Current folder: press
All folders: press and hold
- 6 CD load
- 7 CD select
- 8 File select
- 9 Eject
- 10 Repeat
Current file: press
All files in current folder: press and hold

n Loading a CD

► Type A (without touch screen)

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".

► Type B (with touch screen)

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.

n Loading multiple CDs

► Type A (without touch screen)

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the disc slot door turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the disc slot door turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the "DISC·AUX" button.

► Type B (with touch screen)

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.
- 3 After inserting a CD, wait until the indicator changes from flashing amber to green, then insert the next CD after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all CDs.

To cancel the operation, press the "LOAD" or "DISC·AUX" button. If you do not insert a CD within 15 seconds, loading will be canceled automatically.

n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.




- 1 Power on/change mode: press
Power off: press and hold
- 2 Volume
- 3 Radio: radio tuner
CD: disc/track/file (MP3/WMA) select

n Rear seat audio controls (if equipped)


Some front audio features can be controlled from the rear seats.

► 5-seat models

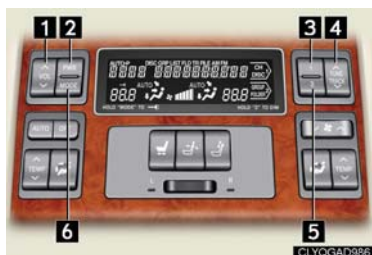


- 1 Volume
- 2 Power
- 3 Disc select
- 4 Radio: station select
Audio CD: track select
CD with MP3/WMA files: file select
- 5 Folder select
- 6 Audio sources

► 4-seat models

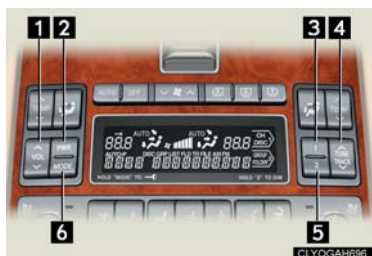

Front Air Conditioning System (without touch screen)

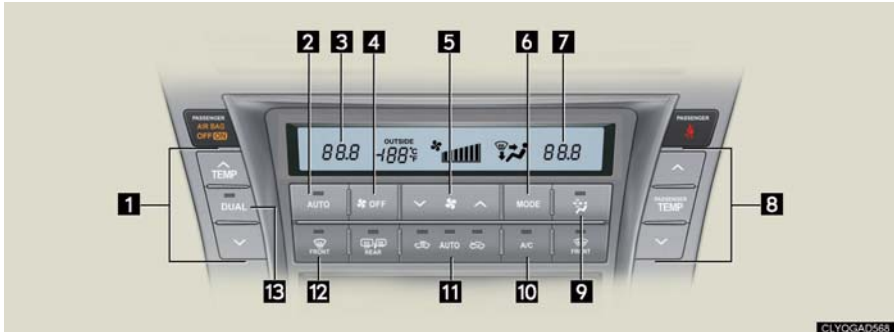


- | | |
|--------------------------------------|---|
| 1 Driver side temperature control | 8 Passenger side temperature control |
| 2 Automatic mode button | 9 Micro dust and pollen filter button |
| 3 Driver side temperature display | 10 "A/C" button |
| 4 "OFF" button | 11 Outside air/recirculated air mode button |
| 5 Air volume controls | 12 Windshield defog/defrost |
| 6 Air flow controls | 13 Dual mode button |
| 7 Passenger side temperature display | |

n Using the automatic mode



- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

n Adjusting the temperature in dual mode

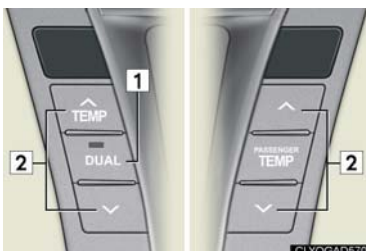

In dual mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the "DUAL" button.
- 2 Adjust the driver side temperature using the "TEMP" buttons, and the passenger side temperature using the "PASSENGER TEMP" buttons.

Front Air Conditioning System (touch screen without rear air conditioning system)



- | | |
|--|---------------------------------------|
| 1 Air conditioning operation screen display button | 7 Micro dust and pollen filter button |
| 2 Air flow display | 8 Windshield defog/defrost |
| 3 Fan speed display | 9 "OFF" button |
| 4 Passenger side temperature control | 10 Driver side temperature display |
| 5 Outside air/recirculated air mode button | 11 Automatic mode button |
| 6 Passenger side temperature display | 12 Dual mode button |
| | 13 Driver side temperature control |
| | 14 "A/C" button |

n Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

n Adjusting the temperature in dual mode

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side. To cancel the dual mode, press the "DUAL" button.

Front Air Conditioning System (touch screen with rear air conditioning system)



- | | |
|---|--|
| 1 "A/C" button | 8 Outside air/recirculated air mode button |
| 2 Air flow display | 9 Passenger side temperature display |
| 3 Air conditioning operation screen display button | 10 Micro dust and pollen filter button |
| 4 Rear air conditioning operation screen display switch | 11 Windshield defog/defrost |
| 5 Fan speed display | 12 "OFF" button |
| 6 Air purifier and rear air conditioning operation switch | 13 Driver side temperature display |
| 7 Passenger side temperature control | 14 Automatic mode button |
| | 15 Individual mode button |
| | 16 Driver side temperature control |

n Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

n Adjusting the temperature in individual mode

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.


Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To adjust the temperature for the rear seats, see page 49.
To cancel the individual mode, press the "4-ZONE" button.

Rear Air Conditioning System (If Equipped)

► 5-seat models




► 4-seat models

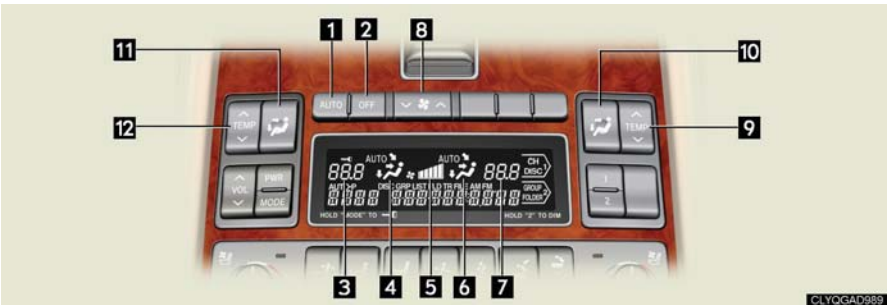

- | | |
|---------------------------------|---|
| 1 Automatic mode button | 7 Right side temperature display |
| 2 "OFF" button | 8 Air volume controls |
| 3 Left side temperature display | 9 Right side temperature control |
| 4 Left side airflow display | 10 Changes the right side air outlet used |
| 5 Air volume display | 11 Changes the left side air outlet used |
| 6 Right side airflow display | 12 Left side temperature control |


n Front controller (touch screen)

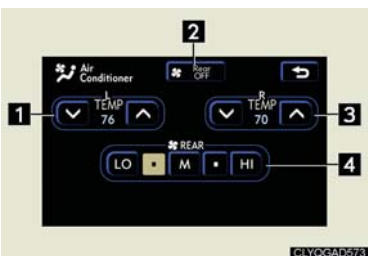

- | |
|---|
| 1 Left side temperature control switch and display |
| 2 Off |
| 3 Right side temperature control switch and display |
| 4 Fan speed display |

Climate Control Seats/Seat Heaters (If Equipped)

n Front climate control seats

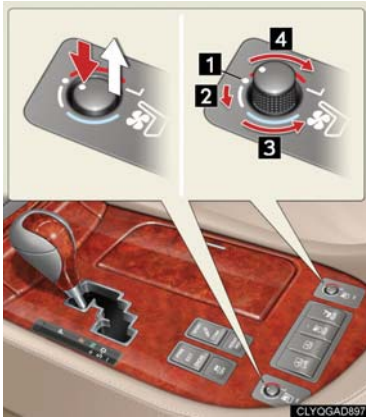

Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1 Off
- 2 Ventilation
- 3 Cool air
- 4 Warm air

n Rear climate control seats

► 5-seat models



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

► 4-seat models



The rear climate control seats can also be turned on and off from the front seat by pressing the button.



n Rear seat heaters



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.




Heated Steering Wheel (If Equipped)



To heat the leather portion of the steering wheel, press the button.

Press again to cancel.

Glove Box

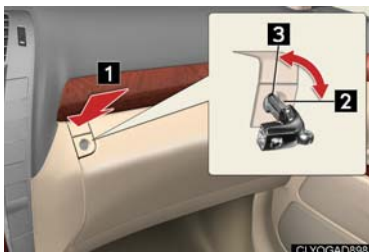

- 1 Opens: press the button.
- 2 Locks
- 3 Unlocks

The glove box can be locked and unlocked using the mechanical key.

Console Box



To open, slide and lift the armrest with the knob pushed in.

There is a power outlet located in the front console box.



Auxiliary Boxes



► Overhead

To open, press in the button.



► Rear seat (if equipped on 5-seat models)

To open, press the button and lift the lid.



► Rear seat (4-seat models)

To open, press in the lid.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Cup Holders




► Front

To open, press down the lid on the side farthest to the driver.



► Rear (type A for 5-seat models)

To open, press in and release.

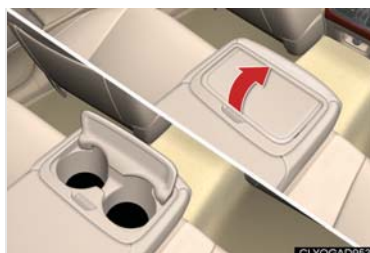

► Rear (type B for 5-seat models)


To open, pull up the lid.



► Rear (4-seat models)


To open, press in and release.

Rear Sunshade/Rear Door Sunshades (If Equipped)

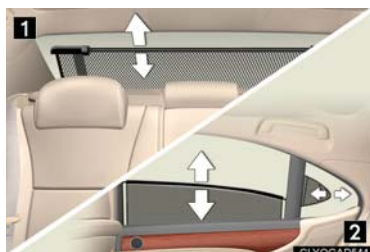


- 1 Rear sun shade
- 2 Rear door sunshades

n Raising/Extending from the front seat

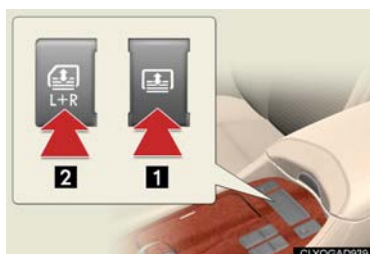

- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.


n Raising/Extending from the rear seat

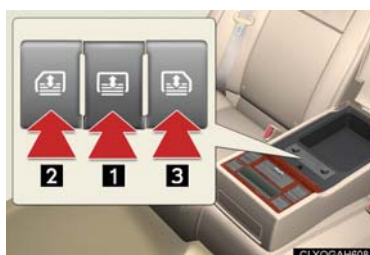

► 5-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshades (left side)
- 3 Extends the rear door sunshades (right side)

Press the button again to lower or retract the sunshade(s).

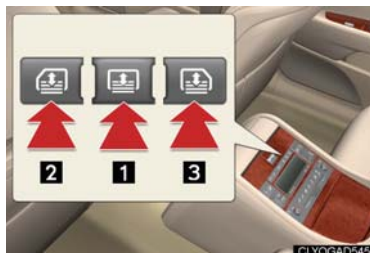

► 4-seat models

- 1 Raises the rear sun shade
- 2 Extends the rear door sunshades (left side)
- 3 Extends the rear door sunshades (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Compass (If Equipped)



To display the compass, press and hold the "AUTO" button for 3 or more seconds.

To cancel the display, press and hold the "AUTO" button again for 3 or more seconds.

Trunk Storage Extension (If Equipped)

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Unlock the armrest door using the mechanical key.

► Opening from the cabin



- ③ Open the inside trunk door from the cabin or trunk, and load baggage or other items.

► Opening from the trunk



Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

n Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

n Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

n Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Lexus Link System (If Equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

n Buttons



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voice-mail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** "SERVICES" button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later playback
- 5** Emergency button
Makes a priority call to the Lexus Link Call Center



n Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.
- Stolen vehicle location assistance
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn /lights and remote door lock/unlock
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record
You can record a conversation with the Lexus Link Advisor.
- Personal calling from OEM telematic services
The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services.
- Other services
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

This system is only operational in GPS (Global Positioning System) and cellular coverage areas.